

# Brief Description of the Several Views of the Drawing


The face of the watch has a 6 line display with up to 20 characters per line

Inside:

Small speaker — 21

Vibration device. — 23

Battery. — 25

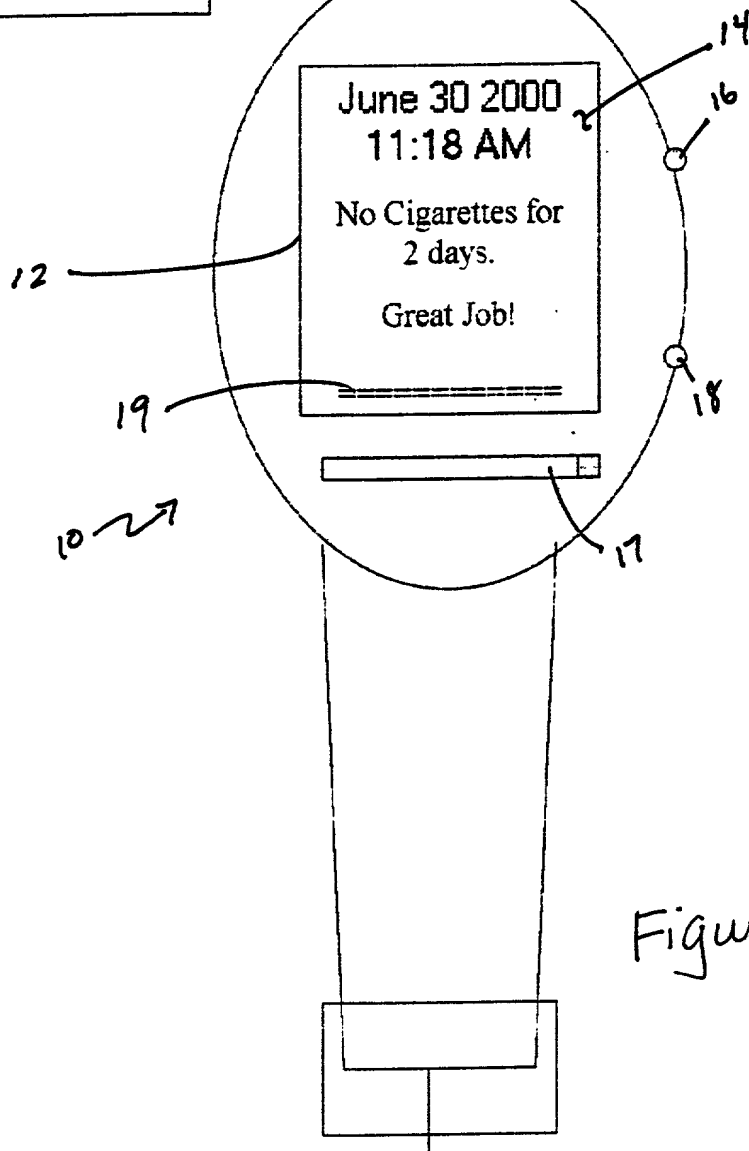

Button A - used to set timer, reset chronograph and to set functions

Button B - used to exit timer and chronograph and set functions

Rate monitor

Button C - "Cigarette Button" Used to record cigarette use and start/stop button for timer and chronograph

Figure 1

# Quitting Time Watch Flowchart, Main Loop

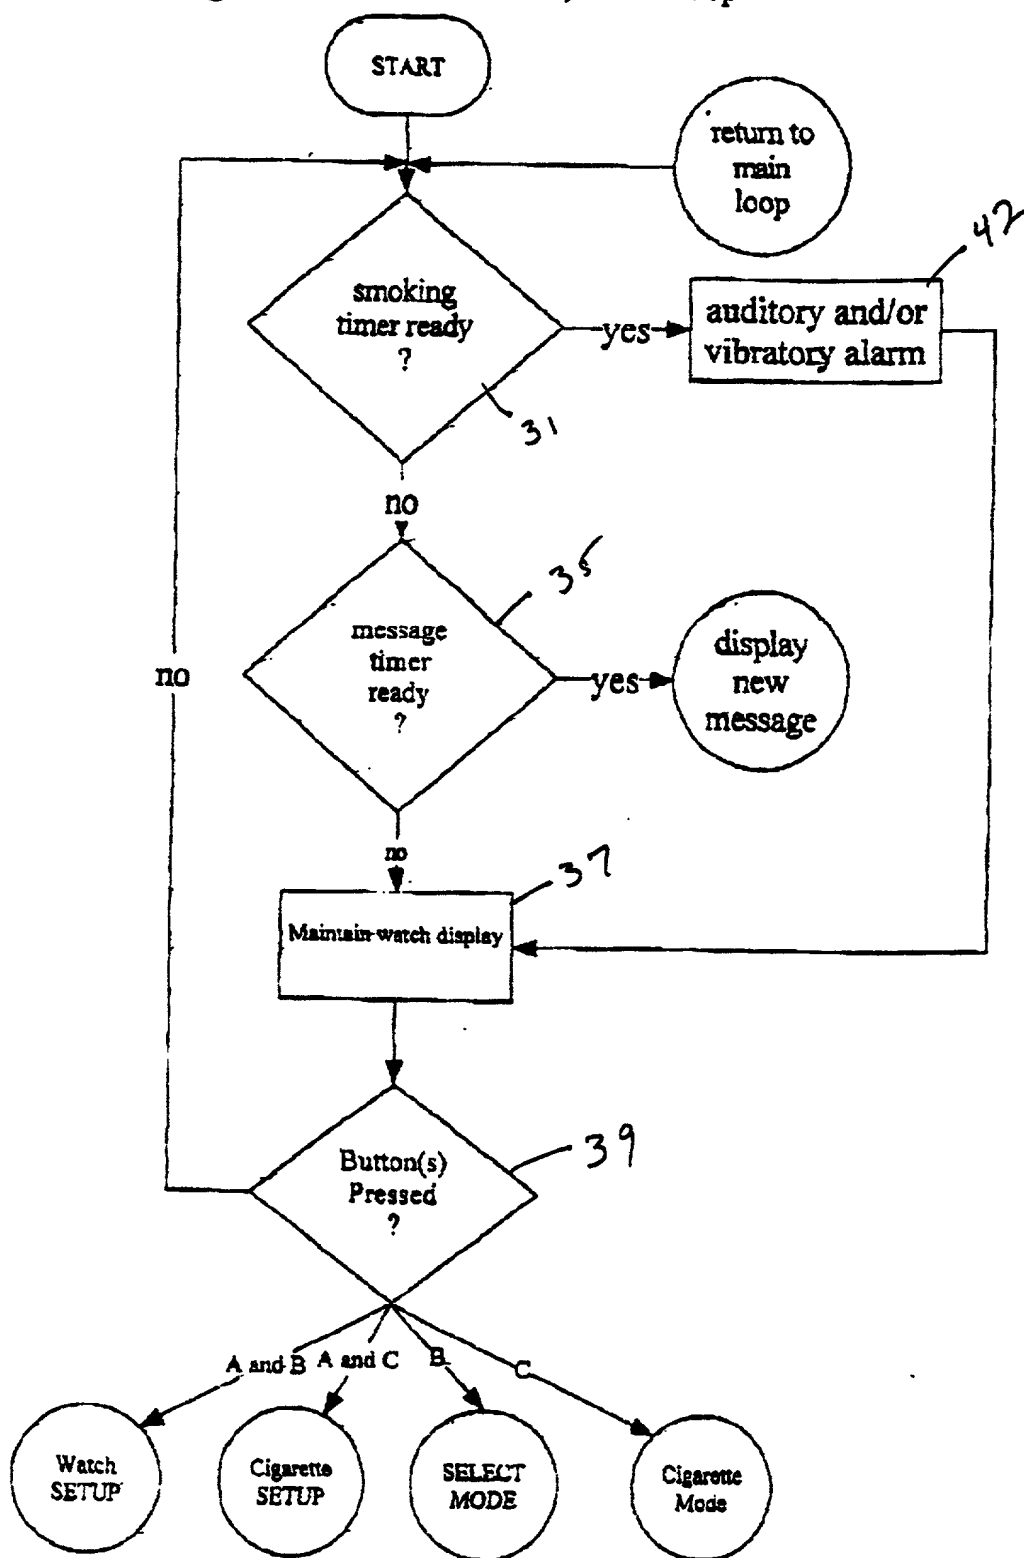


Figure 2

Figure 3

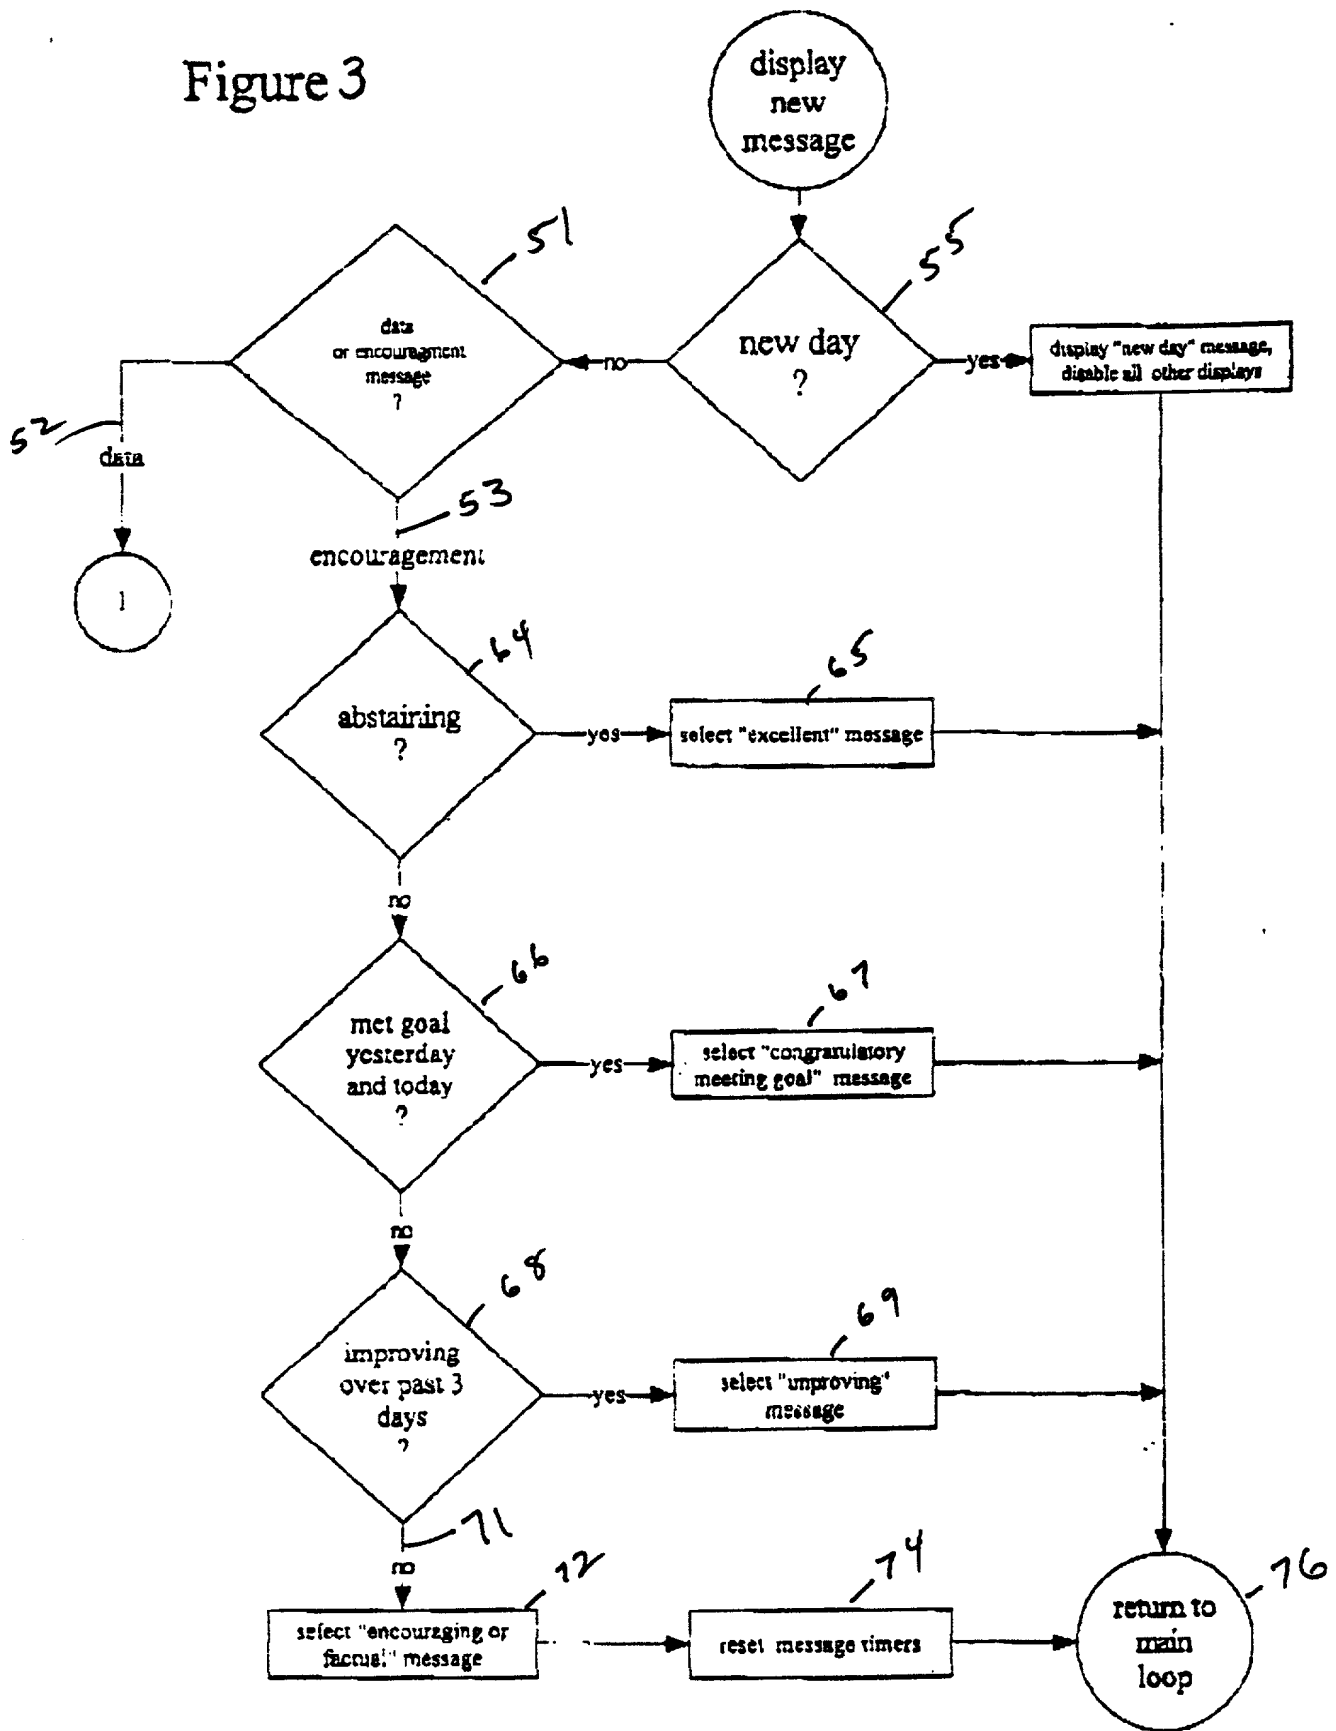
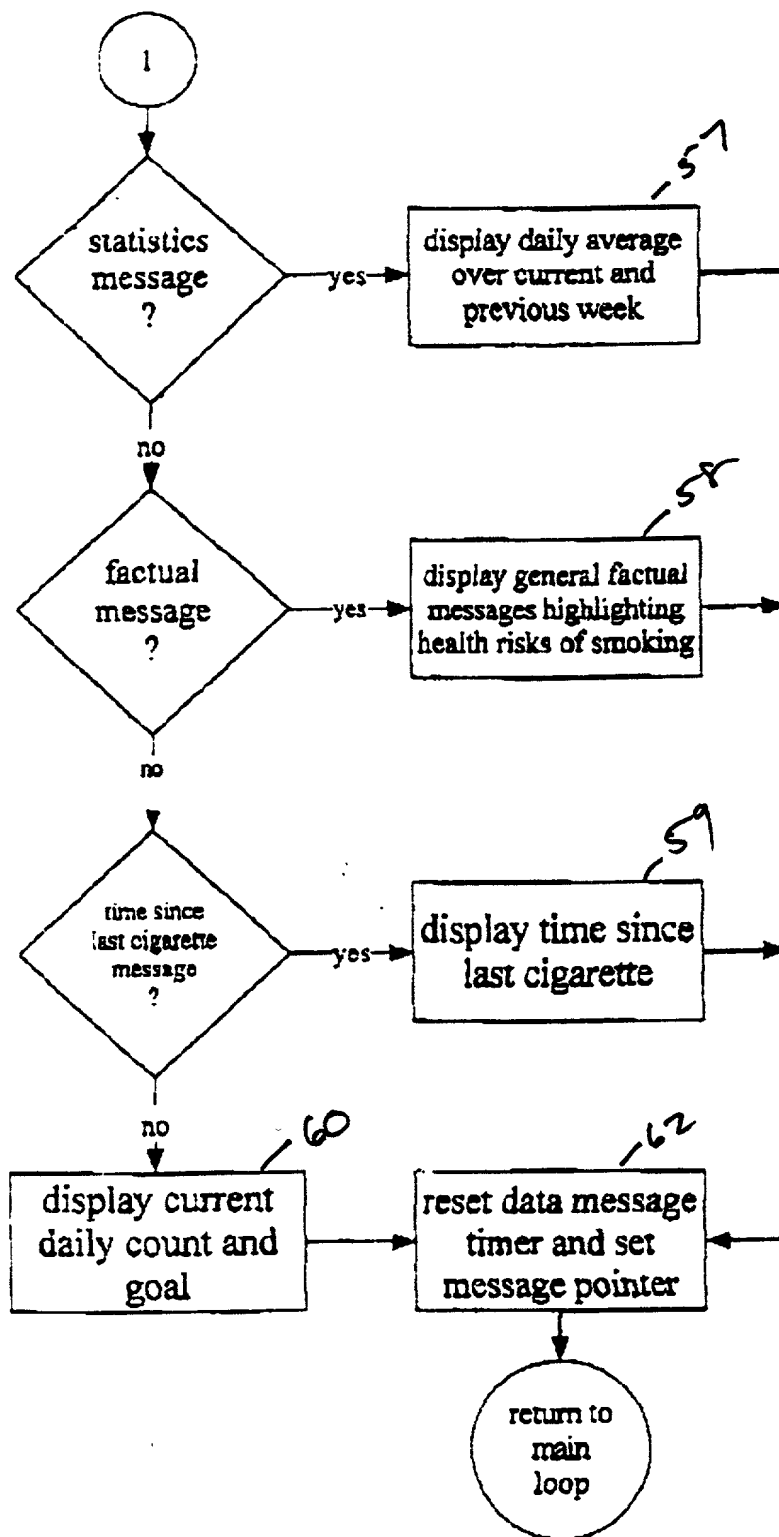


Figure 3 continued



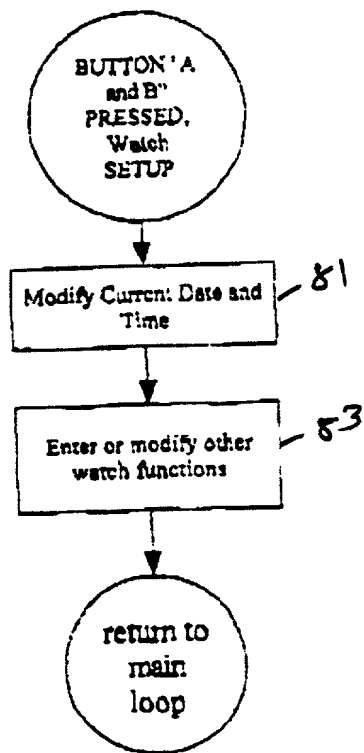


Figure 4

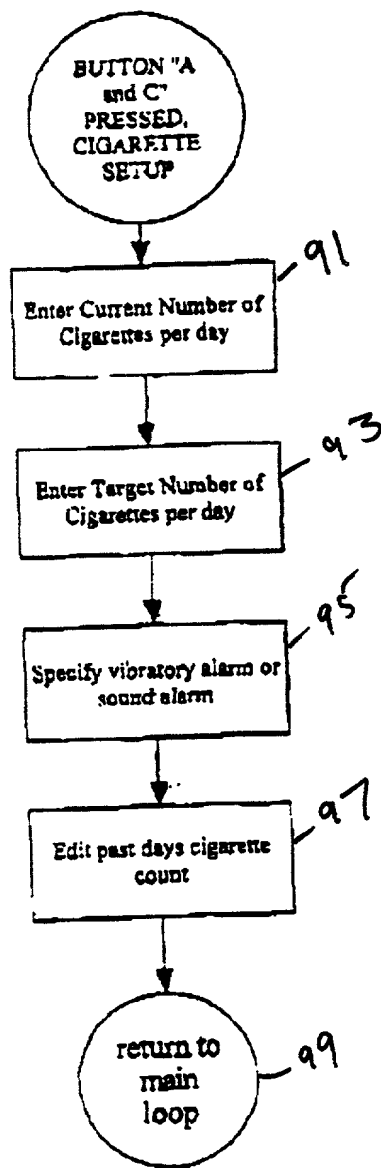


Figure 5

Figure 6

